


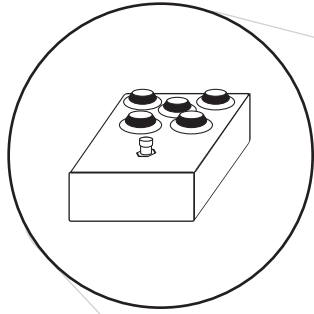

dove

low/medium gain distortion



MIDDLE

powerful and unique middle control;
accommodates a wide range of amps
and music styles
center "Off" detent - clockwise is boost,
counter-clockwise is cut

MID VOICE TOGGLE

alters the range of the middle knob (3 position)
PRES - Works the presence range
MID - works the center of the mid range
HI MID - works the upper mid range

TREBLE

Precise Treble Control
allows removal of fizz without touching
the heart of the treble, or compromising
the amp clean-tone settings

BASS

precise bass control
never "boomy" or fake
never touching the mids

PHASE TOGGLE

Effect Out - Phase select (Switch)
useful in correcting or creating
feedback; also alters the pitch of the
notes feeding back

GAIN MODE TOGGLE

sets gain structure (3 position)
X - Extra gain and heaviness
C - Cleans up well, least high-gain hiss
S - Super lead, Upper-mid push


GAIN

Note: when using the EXP pedal, Gain
Knob sets the max available distortion

VOLUME

adjust to taste
Unity Gain is
approx 11:00

"ON" LED (GREEN)

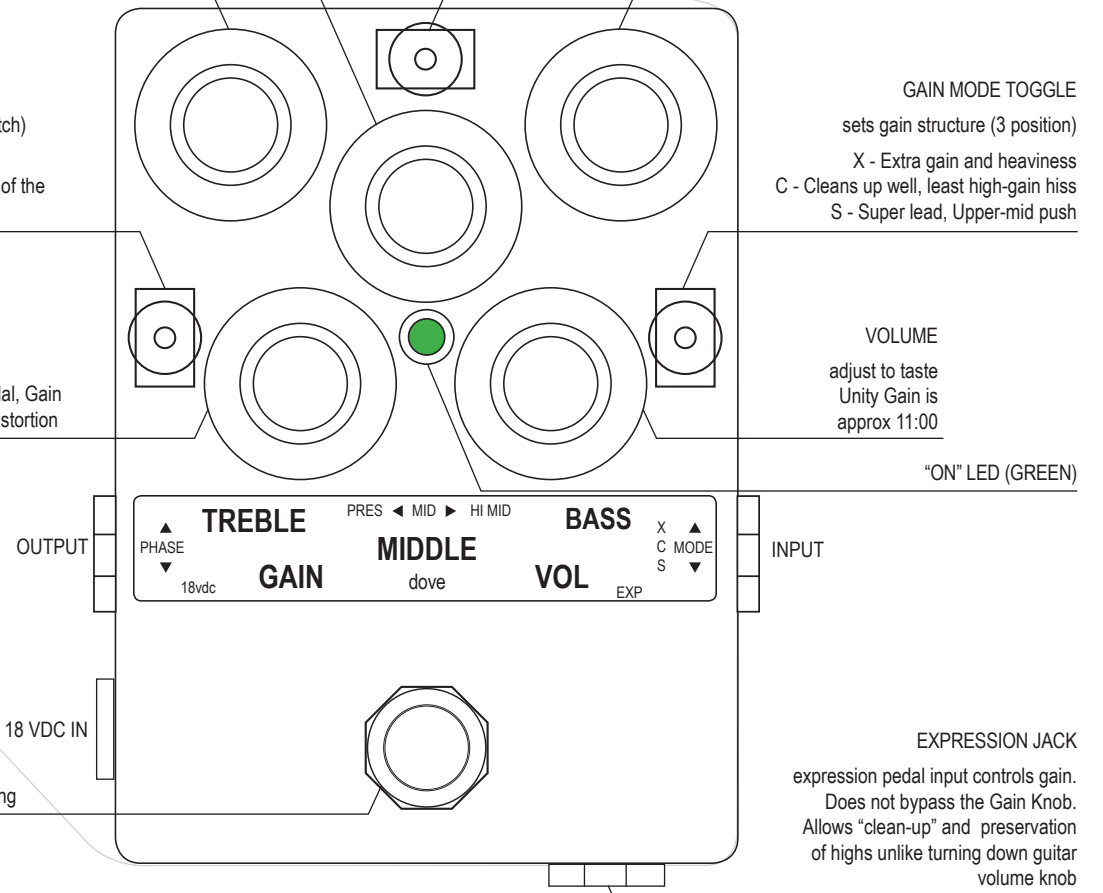

selects "ON" or Bypass
hardwired, true-bypass switching

EXPRESSION JACK
expression pedal input controls gain.
Does not bypass the Gain Knob.
Allows "clean-up" and preservation
of highs unlike turning down guitar
volume knob

ACTUAL SIZE

4 1/4" deep
3 1/4" wide
2" tall