





# halophaze

two-speed phaser with stereo output

## Suggested Halophaze Settings

Knobs/Switches	Phase 90	Univibe	Slow Jet Phase	Phase Wah	Phase Yoing	Bass Phase
Width	9:00 to 11:00	12:00	12:00	5:00	5:00	1:00 to 3:00
Speed	9:00 to 4:00	11:00 to 3:00	9:00 to 10:00	1:00 to 3:00	1:00 to 3:00	1:00 to 3:00
Mix	12:00	11:00	3:00	5:00	5:00	3:00
Feedback	12:00	12:00	5:00	5:00	5:00	8:00
Left Mode Sw	up	down	down	down	up	down
Right Mode Sw	up	down	up	up	down	up

Tips: For more of a "block logo" Phase 90 sound, set feedback 1:00 to 2:00.  
 For variations on Phase Wah and Phase Yoing, place Feedback at 8:00 (Full negative.)

## Favorite Halophaze Settings

Knobs/Switches

Width

Speed

Mix

Feedback

Left Mode Sw

Right Mode Sw