




powerglide

two speed tremolo

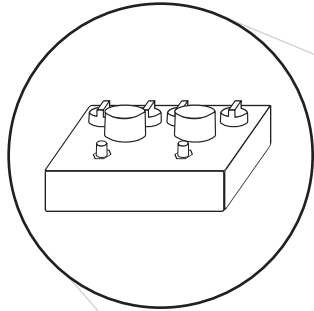

DEPTH 1 AND DEPTH 2

individual depth knobs for each speed
for example, Speed 1 may be set slow at max depth (5:00)
for a severe On/Off throb and Speed 2 may be set fast at
shallow depth (12:00) for a soft warble

EXPRESSION PEDAL INPUT

controls Speed 1 (Yellow)
Ramp knob becomes "damping" control

green LED flashes in time
when Speed 2 is selected

yellow LED flashes in time when
Speed 1 is selected

RAMP

instant "glitchless" speed change
on "Min" Ramp
"Max" Ramp allows 3 to 5 seconds to
ramp up to fast speed, 10 seconds to
ramp down to slow speed

VOLUME

adjust to taste
unity gain is approx 12:00

"ON" indicator LED (red)


WAVEFORM MODE SELECT SWITCH (GLOBAL) 3 position

UP for deep, swaying, brownface-style trem
MIDDLE for smooth, even, blackface-style trem
DOWN for full Off/On square-wave chop

ACTUAL SIZE

4" deep
5 3/4" wide
2" tall

selects "ON" or bypass
hardwired, true-bypass switching

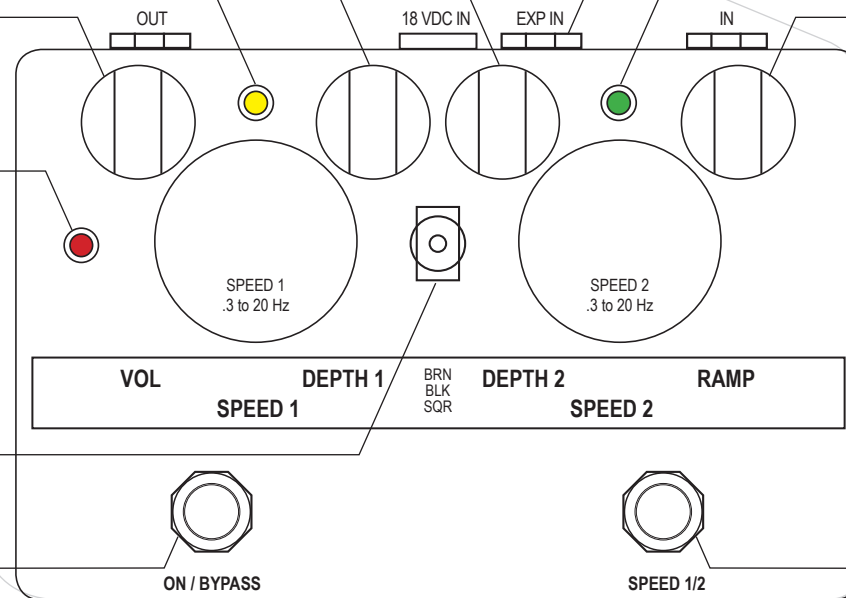

selects between
Speed 1 and Speed 2