


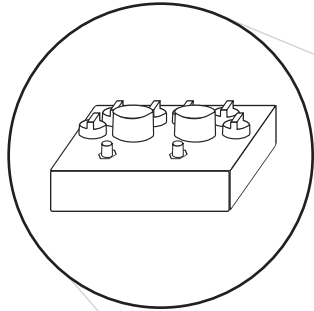

stereo powerglide

two channel, two speed tremolo



PAN OR SYNC MODE SWITCH
only for stereo operation with 2 amps

Pan mode - while amp 1 is going up in volume, amp 2 is going down
Sync mode - both amps go up and down in volume together

Output B is for STEREO OUTPUT

yellow LED flashes in time when Speed 1 is selected

Output A is main output
use for MONO IN / MONO OUT

CHANNEL A DUAL DEPTH KNOBS

Channel A features individual depth knobs for each speed
For examples, Speed 1 may be set slow at max depth (5:00) for a severe On/Off throb and Speed 2 may be set fast at shallow depth (12:00) for a soft warble

CHANNEL A VOLUME

adjust to taste
unity gain is approx 12:00

Channel A "ON" indicator LED (red)

WAVEFORM MODE SELECT SWITCH (GLOBAL)

3 position
UP for deep, swaying, brownface-style trem
MIDDLE for smooth, even, blackface-style trem
DOWN for full Off/On square-wave chop

selects "ON" or bypass for Channel A
hardwired, true-bypass switching

CHANNEL B NORMAL / MUTE SWITCH

allows the choice to mute Channel B when footswitching to bypass

EXPRESSION PEDAL INPUT
controls Speed 1 (Yellow)
Ramp knob becomes "damping" control

CHANNEL B DEPTH KNOB
Stereo Channel B features a single depth knob for Speed 1 and Speed 2.
This simplifies stereo setup

Input B is for STEREO INPUT

green LED flashes in time when Speed 2 is selected

Input A is main input
use for MONO IN / MONO OUT
use for MONO IN / STEREO OUT

RAMP
instant "glitchless" speed change on "Min" Ramp
"Max" Ramp allows 3 to 5 seconds to ramp up to fast speed, 10 seconds to ramp down to slow speed

CHANNEL B VOLUME
adjust to taste
unity gain is approx 12:00

Channel B "ON" indicator LED (red)

EFFECT OUT: PHASE SELECT SWITCH
useful in correcting or creating a focused or wide stereo image when using 2 amps

selects between Speed 1 and Speed 2

selects "ON" or bypass for Channel B
hardwired, true-bypass switching

ACTUAL SIZE

4" deep
5 3/4" wide
2" tall

NOTE:

The following are NOT used for MONO IN / OUT operation

Input B
Output B
Depth B
Volume B
Phase toggle
Pan / Sync toggle
Channel B norm / mute toggle
Channel B bypass footswitch

